

Impulse

SITS




Impulse


UPHOLSTERY



COMFORTS

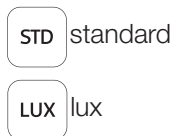


COVERS

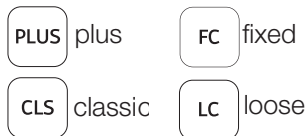


SPECIAL




Drawing show combinations with armrest I. Combinantons with other armrest are properly longer or shorter in width.

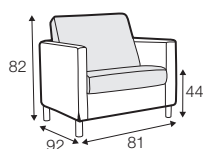


armchair




footstool 80x64

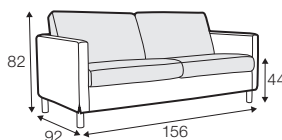


2 seater

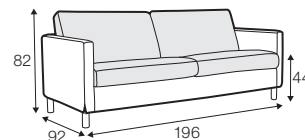


2,5 seater

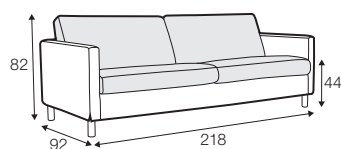


3 seater

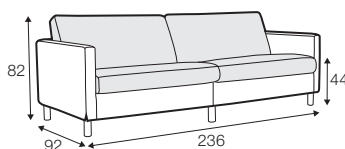


4 seater divided

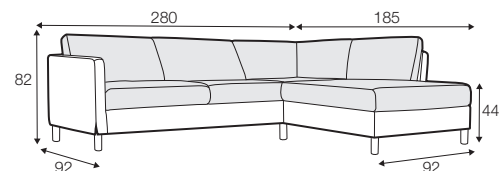

set 4 right / or left
2,5 seater left / or right + divan right / or left

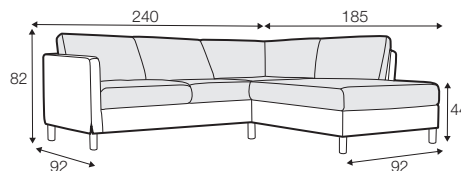


set 5 right / or left
2 seater left / or right + divan right / or left

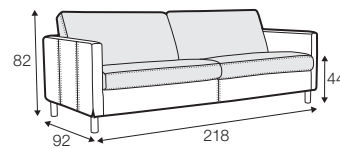


example of leather cover
3 seater


modular system

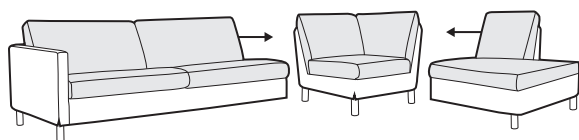


elements of the modular system

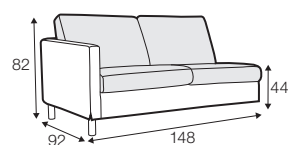


2 seater left / or right

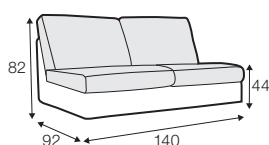


2 seater
without armrests

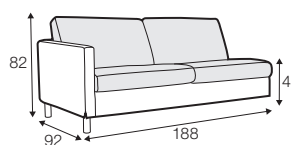


2,5 seater left / or right

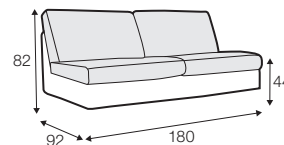


2,5 seater
without armrests

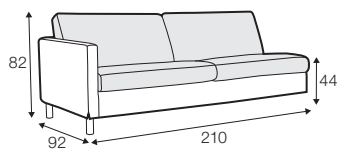


3 seater left / or right

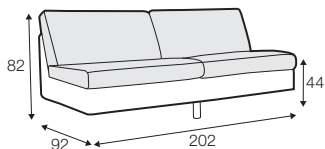


3 seater
without armrests

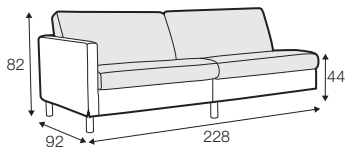


4 seater divided left / or right

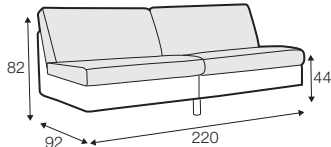


4 seater divided
without armrests

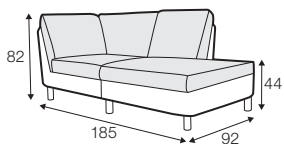

divan right / or left

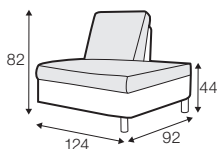


bench right / or left

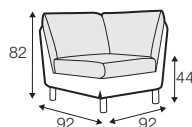


corner 90°

extra dimensions




depth of seat



accessories




cushion

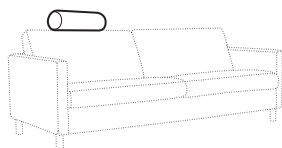


headrest with roll L-60

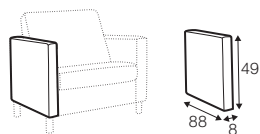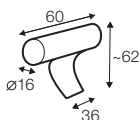

armrest I

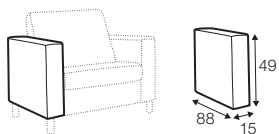


armrest II

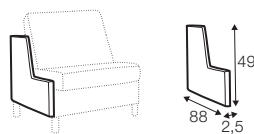


endpart left / or right


legs

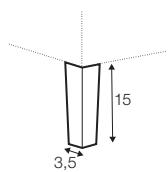


no. 109
wood

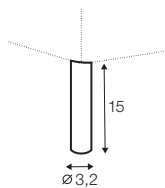

no. 195
metal chrome,
painted black

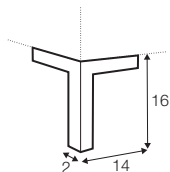


no. 47
metal chrome,
painted black

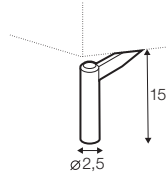


no. 145A
metal chrome,
painted black

All legs can be fixed to both armrests:

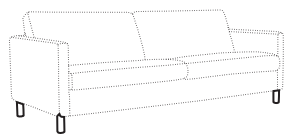

under armrest

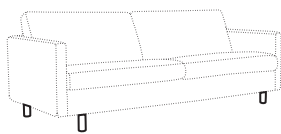

under frame